

# Neon Marker Board



Bright neon colors will be illuminated when the unit is plugged in. Power plug is located At the bottom right side of the unit.



Accessories Included:  
4 Neon Markers & 1 Wiping Cloth



Side shot of frame showing the power plug connected to the unit, and the round black circle next to it is where you press to cycle through the colors and flashing mode. The first time you press it the color will be red, then when pressed again it will flash red; there are several color modes, red, green, blue, yellow, purple so each press will bring you to a color then the next press would flash that color. One of the last modes is that it will cycle through all the colors if you want.



The unit hangs vertical as shown above.